



## Usage Notes

1. If RF inputs/outputs are used in single-ended configuration, terminate unused inputs/outputs with 50 ohm loads.
2. Use on-board switches to control the divide ratios.
3. Refer to the UXM15P datasheet for performance specs.
4. Call (707) 568-5900 x 120 for assistance.

## 1k Potentiometer

1. Controls the output amplitude
2. Connected between VADJ & VCC
3.  $V_{out} = V_{max} * 680/(680+R)$
4. Current rating of R > 8mA